HELPFUL REMINDERS



Right side of Phone

DIAL set to "T"

RINGER RING TONE DIAL

LO HI T P

TELEPHONE SET UP

On the right hand side of the Ameriphone telephone, the Dial switch should be set to "T" (for Tone), not P (for pulse).

FAX SET UP

(Color coding may be helpful.)

Connect the inbound telephone line (the one connected to the wall) to the LINE port on back of the fax machine.

Connect the EXT port on the back of the fax machine to the Ameriphone telephone LINE port on the back of the telephone.

PLAIN PAPER FAX & COPIER FUNCTION AUTO ANSWER QUICK SCAN START

Wall

Jack

FAX SET UP

Back of FAX

EXT to

Phone

Phone

Wall Jack

to LINE

On the front of the fax machine, look for a RED "Auto Answer" light. If the RED light is lit, auto answer is on. If the RED light is not lit, push the Auto Answer button to turn it on.

Pictured above Gary Mudd, Vice President of Public Affairs American Printing House for the Blind

Pictured on reverse Maria Delgado, Field Services Representative American Printing House for the Blind IVS, LLC 502-426-7905 or 888-888-6952 Ext. 0 www.ivsllc.com